



Touching the screen will stop playback.





The Flyover button replaces the Bluetooth button while in the defined Tee area.

Flyover playback for current hole is accessible from the Main Menu.





The BT button returns upon entering the Fairway.

